

Instruction for iPhone

1. brief introduction

The documents mainly introduces how to set and use the Software for iPhone OS.

The Software has some main functions.

- 1) Browse real time video function;
- 2) Cloud stand control function (the front end is to control ball machine).

Essential condition

Need iOS 3.0 or higher release, the cellular phone includes iPhone, the iPod touch waits

2. Install and operating instructions




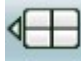
- 1) Circulate iPhone App Store procedure, cut over the huning label page, search to input **TMEye+** in the column, will find out to apply a procedure setup to wrap, click to carry on a setup then.
- 2) Will appear a routing diagram mark after the setup, the following chart










- 3) Click a homologous routing diagram mark, circulate after the procedure a beginning to start interface the following chart

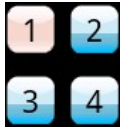

4) Press button vs in response to the function is as follows

Function key	name	Function description
	play	The procedure connectivity equipment combines to start broadcasting a video
	snap	Grasp beats snap Grasp to clap a current ICON(grasp a chart document to recognize tacitly conservancy to the cellular phone of tacit approval of photograph catalog bottom.)
	setting	Establish a DVR IP address or watch an area, port, user's name and password and equipment alias information
	Up group	Can select up the gang gateway

	Next group	Can select to descend gang gateway
	About	About information
	Selective channel	Select gateway Selective channel Select a some video of one gateway that broadcasts an equipment.Can carry out eight roads, 16 road gateways to cut over with"descend gang" team work
	PTZ control	Carry out a cloud on the stage, next, left and right control
	Zoom ratio	The realize tension far draws near
	focus	Carry out focal length to add and subtract
	aperture	Carry out diaphragm to add and subtract

- 5) Such as first time use or need to carry on parameter to change, please click **【setup】** button enter a parameter setup interface.The following chart

 说明:
explain

Server address(Address):DVR male net IP address or dynamic state area

Server port(Port):In DVR setup ascend specialized give the port of cellular phone

Equipment denomination(DeviceName):The alias of equipment is easy to classify several equipments

User's name(User ID):The user's name reconciliation that carries a setup with IE

 
Password>Password):The password reconciliation that carries a setup with IE



Is a return button




Enter a history record page

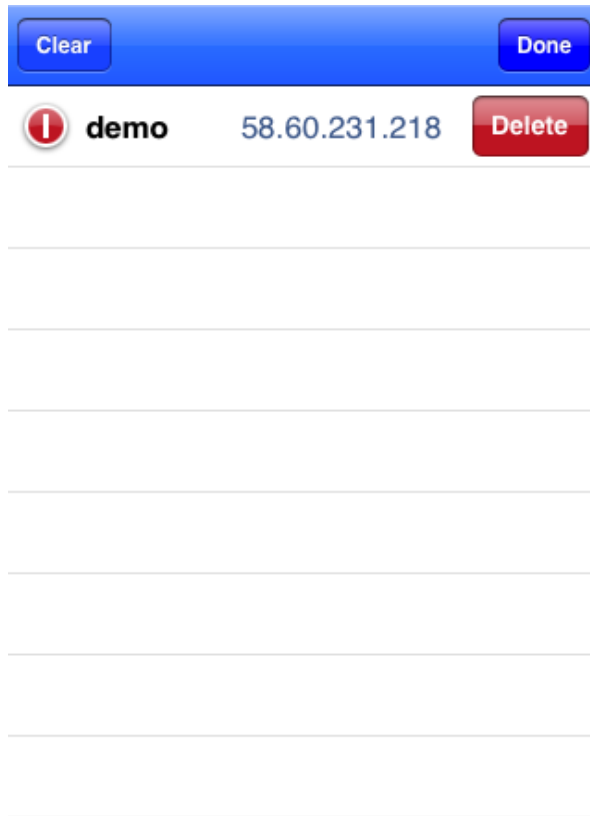

1. Pick out in the history record a certain click and then can carry on the watch a dot of watch

2. Delete a certain history record

 Lightly sweep a certain record, click again **【Delete】** button , can immediately delete an equipment, the following chart:

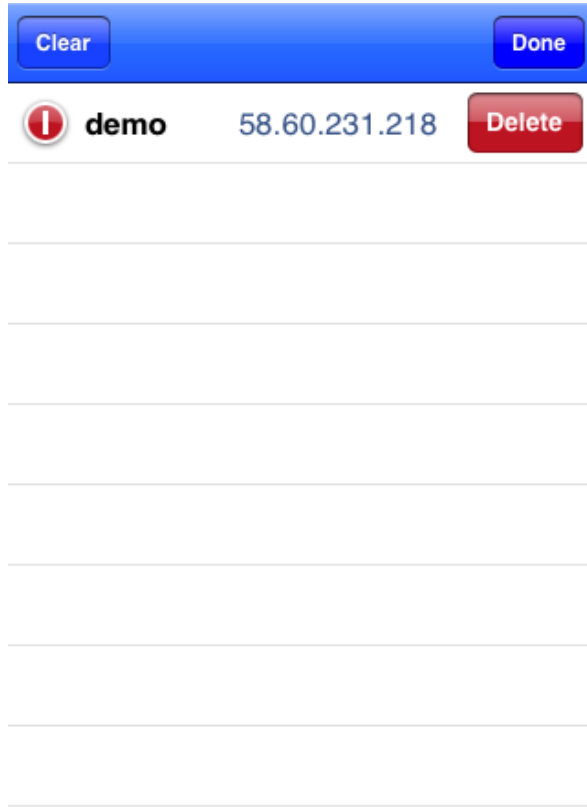

6) The video displays mode

1. Down the routine mode and full plate mode progress cuts o

Regular support mode



2. When the handle machine lays down horizontally will the automatic full plate broadcast

7) channel switching

Pick out homologous gateway, the procedure will open homologous gateway to combine to automatically broadcast a video. The procedure tacit approval will display 1~4 gateways bottom, win an election amid when the next gang gateway press button will gateway will cut over to 5~8, 8-12, 12-16 cyclic transformation cutover

The DVR parameter that favors a cellular phone establishes a referenc

Resolution: CIF or QCIF

Leads: 5-1

The code flows a type: Limit

The code flows: 64-256Kb/S

Note: Can carry on tune according to the cellular phone performance and the network condition. Higher cellular phone performance and network condition can display better effect. If the network condition is worse, can appropriately the step - down lead and assure flowing freely